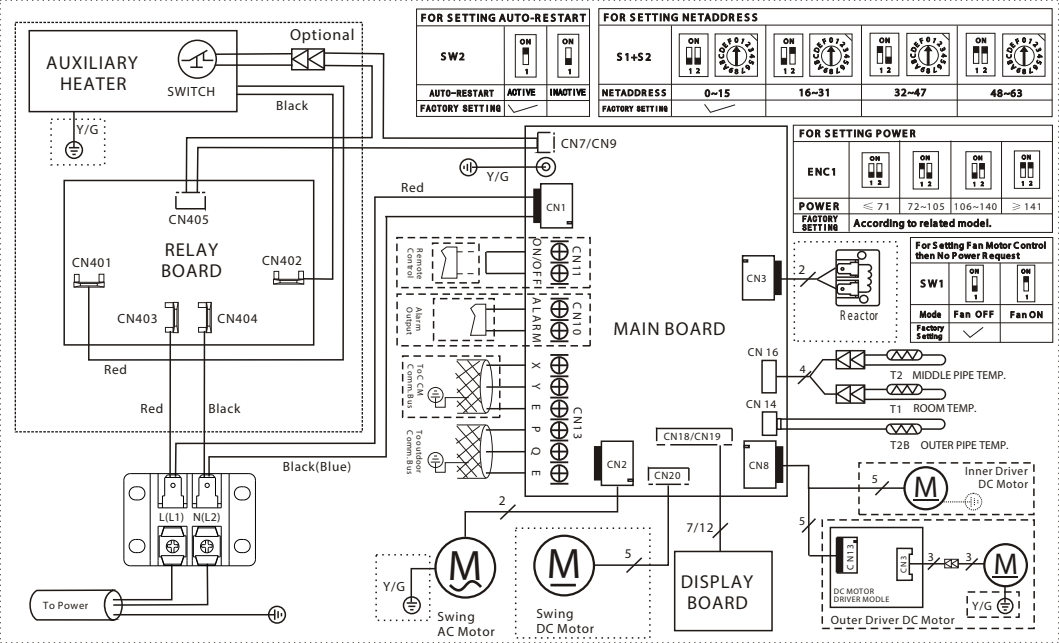
FOR SETTING AUTO-RESTART
SW2
ON 1
ON 1
AUTO-RESTART
ACTIVE
INACTIVE
FACTORY SETTING
FOR SETTING NETADDRESS
S1+S2
ON 1 2
SECOND 0 1 2 3 4 5 6 7 8 9 A B C D E F
NETADDRESS
0~15
16~31
32~47
48~63
FACTORY SETTING
FOR SETTING POWER
ENC1
POWER
≤ 71
72~105
106~140
≥ 141
FACTORY SETTING
According to related model.
For Setting Fan Motor Control then No Power Request
SW1
Mode
Fan OFF
Fan ON
Factory Setting
AUXILIARY HEATER
SWITCH
Optional
Black
Y/G
CN405
RELAY BOARD
CN401
CN402
CN403
CN404
Red
Red
Black
Black(Blue)
L(L1)
N(L2)
To Power
CN7/CN9
Y/G
Red
CN1
Remote Control
ON/OFF
CN11
Alarm Output
ALARM
CN10
Tx/Cn Comm.Bus
Tx/Cn/Rx Comm.Bus
X Y E P Q E
CN13
MAIN BOARD
CN3
Reactor
CN16
T2 MIDDLE PIPE TEMP.
CN14
T1 ROOM TEMP.
T2B OUTER PIPE TEMP.
CN18/CN19
CN2
CN20
CN8
Inner Driver DC Motor
7/12
DISPLAY BOARD
Y/G
Swing AC Motor
Swing DC Motor
CN13
CN5
DC MOTOR DRIVER MODLE
Y/G
Outer Driver DC Motor